

COMPUTHERM Q20RF

***Programmable wireless (radio-frequency)
digital room thermostat***



Operating Instructions

TABLE OF CONTENTS


1. A general description of the thermostat	5
2. Important warnings and safety recommendations	9
3. Information appearing on the display of the thermostat	10
4. Location of the thermostat and receiver unit	11
5. Putting the thermostat and the receiver into operation, basic settings	
5.1. Commissioning the thermostat	12
5.2. Connection of the receiver unit	13
5.2.1. Connecting the controlled device to the receiver unit	14
5.2.2. Connecting the receiver unit to the mains	16
5.3. Putting the receiver unit into operation	16
6. Operation of the thermostat that has been put into operation	17
7. Settings	18
7.1. Selecting the operating mode (FUNC)	22
7.2. Switching on and off of the programmed mode (PROGRAM)	22
7.3. Selecting switching sensitivity (HYSTER)	23
7.4. Calibration of the temperature sensor (T CALIB)	24
7.5. Calibration of the humidity sensor (H CALIB)	24
7.6. Setting the humidity limit for cooling (H LIMIT)	24
7.7. Switching on and off of the pump protecting function (PUMP)	24
7.8. Synchronisation with the receiver unit(s) (SYNC)	25
7.9. Testing wireless communications (TEST)	25
7.10. Restoring factory default setting (RESET)	26

8. Operating modes of the device	27
8.1. Economy mode (☾)	28
8.2. Comfort mode (☀)	28
8.3. Manual mode (👉)	28
8.4. Programmed mode (📅)	29
8.4.1. A description of programming	29
8.4.2. Steps of programming the device	32
8.4.3. The use of "COPY" function (copying the program of a day to another day or other days)	35
8.4.4. Modifying the programs of the device	36
8.4.5. Program inspection	38
8.5. Temporary manual mode until the next program switching	39
8.6. Temporary manual mode for 1 to 99 hours (party program)	40
8.7. Temporary manual mode for 1 to 99 days (holiday program)	40
9. Operation of backlight	41
10. Locking the control buttons	42
11. Battery replacement	42
12. Receiver unit of the thermostat	43
12.1. Operation of the receiver unit, meaning of its LED signs	43
12.2. Synchronizing the receiver unit(s) with one or more thermostats	44
12.3. Manual control of the receiver unit	45
13. Technical data	49

1. A GENERAL DESCRIPTION OF THE THERMOSTAT

The **COMPUThERM Q20RF** type switch mode room thermostat is suitable for regulating a large majority of boilers, air conditioners, humidifiers and dehumidifiers in circulation in Hungary. It can easily be connected to any gas boiler, air conditioner, humidifier and dehumidifier with two-wire room thermostat connection point and to other electrical devices, regardless of whether the device has a 24 V or 230 V control circuit.

The device can be programmed as needed so that the heating/cooling or humidifier/dehumidifier system heats/cool and humidifies/dehumidifies

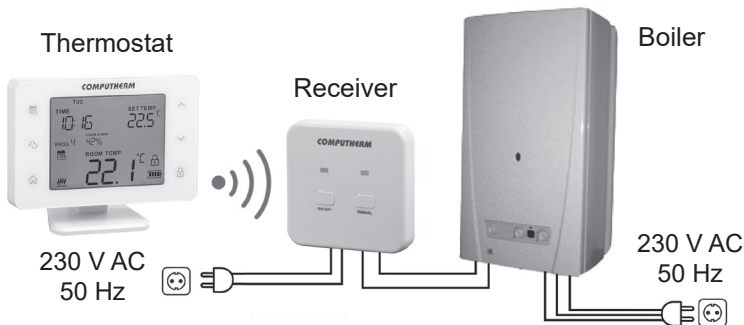

your apartment or office to the desired temperature or humidity at the times you want, and it contributes to the reduction of energy costs in addition to providing comfort. Separate independent daily programs can be created for each day of the week. For each day, beside 1 fixed switching time (**PROG 0**) 10 freely adjustable (in 10 minutes increments) **switching times** (**PROG 1 – PROG 10**) can be set, and a different temperature (in 0.5 °C increments) and humidity (in 1 percent increments) can be assigned to every switching times.

The device is composed of two units: a portable control unit (thermostat) and a receiver unit that controls the device to be regulated. There is a wireless (radio frequency) connection between the two units therefore there is no need to lay a cable between the thermostat and the device to be regulated. The two units are practically in synchronised state set at the factory. The thermostat and its receiver have their own safety code which guarantees secure operation of the device. For installation and connection of the receiver unit and its synchronisation with the thermostat please refer to Chapter 5.

To extend the lifetime of batteries, the thermostat will not transmit signals continuously. Instead, it will repeat its relevant switch command every 5 minutes. Therefore, the control is ensured even after a blackout.

The portability of the thermostat offers the following advantages:

- no need to lay a cable, which is especially advantageous when old buildings are being modernized,
- the optimal location of the device can be selected during operation,
- it is also advantageous when you intend to locate the thermostat in different rooms in the course of the day (e.g. in the living room during the day but in the bedroom at night).

The effective range of the transmitter incorporated in the thermostat is approximately 50 m in open terrain. This distance may become considerably shorter within a building, especially when a metal structure, reinforced concrete or adobe wall stands in the way of radio waves.

This wireless (radio-frequency) thermostat can also be easily extended with the **COMPUTHERM Q1RX** socket if needed, with which the thermostat is able to control any electrical device (e.g. fan heaters, pumps, zone valves, etc.) operating on 230 V (50 Hz; max. 16 A) according to the room temperature.

(Detailed description of the **COMPUTHERM Q1RX** socket and usage suggestions can be found on our website www.computherm.info.)

The **COMPUTHERM Q2ORF** thermostat can be used as an extension to the **COMPUTHERM Q5RF** or **Q8RF** multi-zone devices.

The simultaneous use of several **COMPUTHERM** room thermostats and one **COMPUTHERM Q4Z** or **Q10Z** zone controller provides the possibility for the thermostats to also control a pump or a zone valve in addition to starting the heater or cooler. This way it is easy to divide a heating / cooling system into zones, thanks to which the heating / cooling of each room can be controlled separately, thus greatly increasing comfort. Furthermore, the zoning of the heating / cooling system will greatly contribute to the reduction of energy costs, as due to this only those rooms will be heated / cooled at any time where it is required.

2. IMPORTANT WARNINGS AND SAFETY RECOMMENDATIONS

- Before starting to use the device, please study carefully the instructions for use and follow strictly the instructions therein.
- The thermostat is designed for business or household (non-industrial) use, it can be used to control any electrical device, the power of which does not exceed 1.38 kW (load capacity: max. 30 V DC / 250 V AC; 6 A [2 A inductive load]).

- This device is designed for indoor use. Do not use in wet, chemically aggressive or dusty environments.
- This device is a thermostat that communicates wirelessly. To avoid signal interference, keep it away from electrical equipment that may interfere with this communication.
- The manufacturer will assume no responsibility for any possible direct or indirect damages or income losses incurring during the use of the device.
- The device does not work without power, but the thermostat can remember the settings. In the event of a possible power supply failure (power cut/battery replacement), it can continue to operate without any external intervention after the power supply is restored. If you intend to use the device in an environment where there are frequent power outages, we recommend that you regularly check the correct operation of the thermostat for safety reasons.
- **Before starting the actual control of the device connected to the thermostat, make sure that the device works perfectly and can be operated reliably even when controlled by the thermostat.**

3. INFORMATION APPEARING ON THE DISPLAY OF THE THERMOSTAT

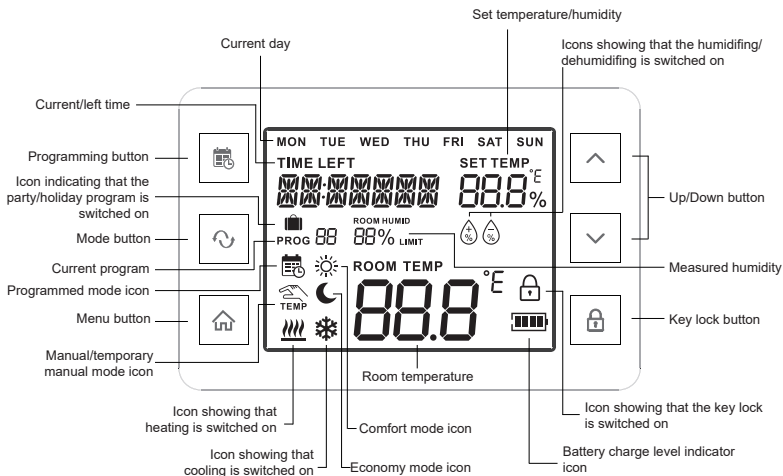


Figure 1

4. LOCATION OF THE THERMOSTAT AND RECEIVER UNIT

It is reasonable to locate it in a room used regularly or for many hours per day so that it is in the direction of natural ventilation in the room but protected from drought or extreme heat (e.g. direct sunlight, refrigerator, chimney, etc). Its optimal location is 0.75 - 1.5 m above floor level.

It is advisable to install the receiver of the **COMPUTHERM Q20RF** in wet, chemically aggressive or dusty environment. thermostat near the boiler, in a place protected from moisture, dust, chemicals and heat. When choosing the location of the receiver, also consider that a propagation of radio waves is prevented by heavy metal objects (e.g. boiler, buffer tank, etc.) or can be adversely affected by metal building structures. If you have it possibility, in order to ensure a interference-free radio frequency connection, we recommend that the receiver be away from the boiler and other large install it at a distance of at least 1 - 2 m from metal structures, at a height of 1.5 - 2 m. We recommend that you check the reliability of the radio frequency connection in the selected location before installing the receiver.

ATTENTION! Do not install the receiver under the boiler cover or in the immediate vicinity of hot pipes, as this may damage the device's components and endanger the wireless (radio frequency) connection. To avoid electric shock, entrust the connection of the receiver to the boiler to a specialist.

IMPORTANT WARNING! If the radiator valves in your flat are equipped with a thermostatic head, adjust it to maximum temperature or replace the thermostatic head of the radiator valve with a manual control knob in the room where the room thermostat is to be located, otherwise the thermostatic head may disturb the temperature control of the flat.

5. PUTTING THE THERMOSTAT INTO OPERATION, BASIC SETTINGS

 
5.1. Commissioning the thermostat

Pressing the lock on the upper side of the housing of the thermostat, remove the back cover of the thermostat as shown in the **figure 2**.

The battery compartment is in the inner side of the front panel of the housing. Insert 2 AA **alkaline** batteries (LR6 type) in accordance with the diagram in the battery compartment.





Figure 2

Warning! Alkaline batteries may only be used for this appliance. Carbon-zinc batteries known as durable or long life batteries and chargeable accumulators are not suitable for the operation of this appliance. Icon 

appearing on the display to indicate low battery voltage warns reliably that the batteries should be replaced only when **alkaline batteries** are used.

After the batteries have been inserted, the display flashes the day, time, program number, adjusted and measured temperatures, measured humidity level and icons showing the operating mode and battery power level.

After inserting the batteries, snap the front panel of the device into the rear panel and touch the  button. After touching the  button, the display stops flashing, the thermostat goes to the main screen and the setting process can be started.

5.2. Connection of the receiver unit

WARNING! The device must be installed and connected by a qualified professional. Before installing, make sure that that neither the thermostat or the device to be controlled is connected to the 230 V mains voltage. Modifying the thermostat can cause electric shock or product failure.

Unscrew the two screws at the bottom of the receiver unit without removing them. Following this, remove the front panel of the receiver unit then fix the back panel to the wall in the vicinity of the boiler with the screws provided.

The marks of the connections are pressed into the plastic above the connection points: **N, L, 1, 2** and **3**.

5.2.1. Connecting the controlled device to the receiver unit

The receiver unit controls the boiler or air conditioner through a potential-free alternating relay whose connection points are: **1** (NO), **2** (COM) and **3** (NC). Connect the two connection points of the heating or cooling equipment to be controlled to the normally open **1** (NO) and **2** (COM) terminals of the relay, as shown on the below figure.

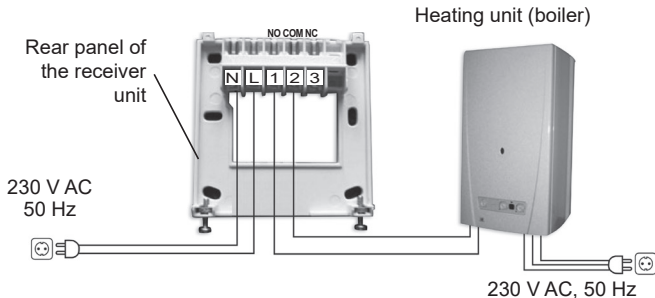


Figure 3

If you would like to operate an old boiler or any other device that has no connection points for thermostats, then the **1 (NO)** and **2 (COM)** connection points of the thermostat should be connected to the mains cable of the device, similarly as a switch would be connected, as shown in the figure below.

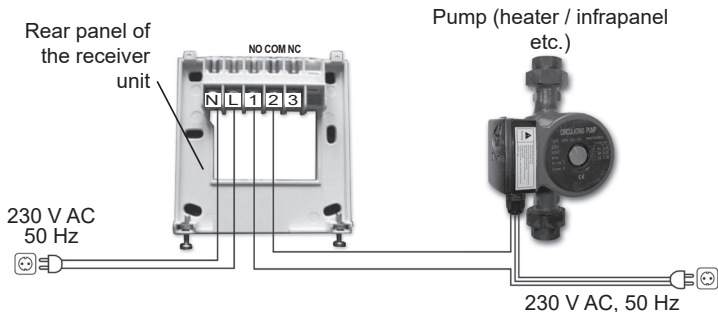


Figure 4



ATTENTION! Always consider the loadability of the receiver unit and follow the manufacturer's instructions of the heating or cooling equipment. The device must be installed and connected by a qualified professional!

The voltage appearing at terminals **1** (NO) and **2** (COM) depends only on the system being controlled, therefore the dimensions of the wire are determined by the type of the device to be controlled. The length of the wire is of no significance, the receiver unit may be installed either near the boiler or far away from it, but do not install it under the housing of the boiler.

5.2.2. Connecting the receiver unit to the mains

230 V supply voltage should be applied to the receiver unit. This ensures power supply to the receiver unit but this voltage does not appear on the output connection points (**1**, **2** and **3**). The neutral conductor and the phase line of the network should be connected to points **N** and **L** (Figure 3; no need to check correct phase sequence). There is no need for earth connection because the product is equipped with double insulation.

5.3. Putting the receiver unit into operation

Turn the power on for the receiver unit. After a few seconds the wireless (radiofrequency) system (thermostat and receiver unit) are tuned into the operating frequency. As a test, in heating mode touch the  button of the thermostat several times until the set temperature exceeds the room temperature by at least 0.5 °C. Following this, within a few seconds the  icon showing power-on state must appear on the display of the thermostat. At the same time, on the receiver unit the red LED should switch on to

indicate that the receiver unit has accepted the command of the transmitter (thermostat).





If that does not happen, the system must be tuned again. You can do it as described in Chapter 7.8

If the distance between the receiver and the transmitter too large due to local circumstances and this makes the wireless (radiofrequency) connection uncertain, install the receiver unit closer to the location of the thermostat or use a **COMPUTherm Q2RF** radiofrequency signal repeater to extend the transmission distance.




6. OPERATION OF THE THERMOSTAT THAT HAS BEEN PUT INTO OPERATION





The thermostat controls (manually or via programming) the devices (e.g. gas boiler, pump or dehumidifier) connected thereto on the basis of the humidity/temperature measured by it and being set, considering the switching sensitivity of the thermostat (± 0.2 °C/ $\pm 1.0\%$ according to factory default) This means that when the thermostat is set to heating mode and 22 °C then at switching sensitivity of ± 0.2 °C the connection points of the output relay of the receiver unit **1** (NO) and **2** (COM) close at a temperature below 21.8 °C (the heating system switches on), and open at a temperature above 22.2 °C (the heating system switches off). In cooling mode the relay switches conversely.

When the thermostat is set to humidifying mode and to 60%, then at switching sensitivity of $\pm 1.0\%$ the output relay of the receiver unit **1** (NO) and **2** (COM) close at a relative humidity below 49% (the humidifier switches on) and open at a relative humidity above 51% (the humidifier switches off). In dehumidifying mode the relay switches conversely.

The closed state of the connection points **1** (NO) and **2** (COM) of the output relay is indicated by the , ,  or  icons appearing on the display of the device, according to the selected mode.

7. SETTINGS

ATTENTION! According to factory default setting the key lock of the thermostat automatically switches on after 30 seconds which is indicated by the  icon that appears in the bottom right corner of the display. To unlock the keyboard, touch the  button for 2 seconds  until the icon disappears from the display.

The thermostat allows a number of setting options by which the operation of the thermostat can be tailored to your liking. You can enter the setting menu of the thermostat by pressing the  button for 2 seconds. Then the continuously illuminated time and the flashing English abbreviation of the relevant day (Monday: **MON**; Tuesday: **TUE**; Wednesday: **WED** and so on) appear on the screen. In the setting menu you can modify the current setting with buttons  and  and touching the  button you can move to the next setting.

The currently modifiable setting is flashing on the display. After the **current day** and **exact time** have been set, you can perform additional settings as follows:

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
FUNC	Operating mode	HEA: heating	HEA	Chapter 7.1.
		COO: cooling		
		HUM: humidifying		
		DEH: dehumidifying		
PROGRAM	Switching on and off of programmed mode	OFF: Switched off. In this case the thermostat is working in a manually set Economy mode or comfort mode.	ON	Chapter 7.2.
		ON: Switched on. In this case the thermostat is working according to a pre-set program or manual mode.		
T UNIT	Temperature unit	°C	°C	--
		°F		
HYSTER	Switching sensitivity	±0.1 – ±1.0 °C	±0.2 °C	Chapter 7.3.
		±0.2 – ±2.0 °F	±0.4 °F	
		±1 – ±5% RH	±1% RH	
MIN	Minimum adjustable temperature/humidity	5 – 45 °C	5 °C	--
		41 – 97 °F	41 °F	
		0 – 98% RH	30% RH	
MAX	Maximum adjustable temperature/humidity	5 – 45 °C	35 °C	--
		41 – 97 °F	95 °F	
		1 – 99% RH	80% RH	
T CALIB	Calibration of the temperature sensor	-3.0 – +3.0 °C	0.0 °C	Chapter 7.4.
		-6.0 – +6.0 °F	0.0 °F	

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
H CALIB	Calibration of the humidity sensor	-10 – +10% RH	0% RH	Chapter 7.5.
H LIMIT	Setting humidity limit in case of cooling	OFF: function switched off	80% RH	Chapter 7.6.
		30-99: if the measured humidity is higher than the set value then the cooling system switches off		
A LIGHT	Automatic backlight	OFF: switched off	ON	--
		ON: switched on (backlight switches on for 10 seconds after any button has been pressed)		
BRIGHT	Backlight brightness	0 - 10	7	--
B LIGHT	Backlight of the buttons	OFF: switched off	ON	--
		ON: switched on (backlight of the keys switches on and off simultaneously with the backlight of the display)		
B SOUND	Acoustic signal when buttons are touched	OFF: switched off	OFF	--
		ON: switched on		
LOCK	Automatic key lock	OFF: automatic key lock is switched off	ON	--
		ON: automatic key lock is switched on (the key lock is activated 30 seconds after touching the last button)		
PUMP	Switching on and off of the pump protection function	OFF: switched off	OFF	Chapter 7.7.
		ON: switched on		

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
SYNC	Synchronisation with the receiver unit(s)	--: moving to the next setting after touching the ↻ button	--	Chapter 7.8.
		SYN: the thermostat is synchronised with the receiver(s) set to synchronisation mode in its environment after touching the ↻ button		
TEST	Testing wireless communications	--: moving to the next setting after touching the ↻ button	--	Chapter 7.9.
		ON: the thermostat changes to test mode after touching the ↻ button		
RESET	Restoring factory default settings	--: saving the settings and exiting the settings menu after touching the ↻ button	--	Chapter 7.10.
		ON: restoring factory default setting after touching ↻ button		


To exit the setting menu and save the settings:


- touch the 🏠 button, or
- wait for 30 seconds until the display of the thermostat is reset to the default screen, or
- go through the settings with the ↻ button.

7.1. Selecting the operating mode (FUNC)

You can easily switch between heating (**HEA**; factory default setting), cooling (**COO**), humidifying (**HUM**) and dehumidifying (**DEH**) modes. The connection points of the output relay of the receiver unit **1** (NO) and **2** (COM) close **at temperatures below those set in the heating mode, at temperatures above those set in the cooling mode, below the humidity level set in the humidifying mode and above the humidity level set in the dehumidifying mode** (taking the switching sensitivities into account).

7.2. Switching on and off of the programmed mode (PROGRAM)

The thermostat can be used in both programmed and non-programmed modes. When the programmed mode is on, in automatic (programmed) mode the thermostat controls the devices connected thereto according to the pre-set program, but it can be switched to manual mode by touching the  button, and in this case it will constantly control the devices according to the temperature/humidity set manually, regardless of the pre-set program.

When you switch off the programmed mode, you can set two independent temperatures/humidity levels (comfort and economy), and you can easily switch between the two modes by touching the  button. In this case the devices connected to the thermostat cannot be controlled according to the pre-set program.

7.3. Selecting switching sensitivity (HYSTER)

The switching sensitivity can be adjusted. By modifying this value, you can define the difference below/above the set temperature/humidity where the thermostat should switch on/off the device connected thereto. The smaller this value, the more stable is the inner temperature/humidity in the room and the comfort improves. Switching sensitivity does not affect the heat loss of the room (building) and vapour formation.

When higher comfort level is needed, it is reasonable to select the switching sensitivity so that it ensures as stable inner temperature/humidity as possible. On the other hand, two frequent starts and stops of the controlled device should be avoided because this may reduce the efficiency and lifetime of the device.

The switching sensitivity can be set in the temperature range of ± 0.1 °C to ± 1.0 °C / ± 0.2 to ± 2.0 °F and in the humidity range of ± 1 to $\pm 5\%$ RH. Apart from some special cases, we propose to use ± 0.1 °C or ± 0.2 °C (factory default) when a heating/cooling system should be controlled. For humidification/dehumidification we recommend you use a switching sensitivity of $\pm 1\%$ (factory default) or $\pm 2\%$. For more information about switching sensitivity please refer to Chapter 6.

7.4. Calibration of the temperature sensor (T CALIB)

The accuracy of the thermometer of the thermostat is $\pm 0,5$ °C. The temperature displayed by the thermostat can be modified by maximum ± 3.0 °C / $\pm 6,0$ °F compared to the temperature measured by the temperature sensor, in increments of ± 3.0 °C / ± 6.0 °F or 0.1 °C / 0.1 °F.

7.5. Calibration of the humidity sensor (H CALIB)

The accuracy of the humidity sensor of the thermostat is $\pm 3\%$ RH. The relative humidity displayed by the thermostat can be modified by maximum $\pm 10\%$ compared to the humidity measured by the sensor, in increments of 1% .


7.6. Setting the humidity limit for cooling (H LIMIT)

When a cooling system including surface cooling is controlled, it is important that the air in the room must not reach dew point because in this case condensation occurs which can cause serious damages. Using this function, you can set the humidity level above which the thermostat will stop cooling to prevent condensation.

7.7. Switching on and off of the pump protecting function (PUMP)


In order to prevent the pump from jamming, the activated pump protection function will start the devices connected thereto for 1 minute every day at 12:00 p.m. (noon), if switching was not done either on the respective day or on the previous day (e.g. during non-heating period). The pump protectionfunction only works when the controlled device is in operable condition.



 

7.8. Synchronisation with the receiver unit(s) (SYNC)


The thermostat and its receiver unit have been synchronized at the factory. When communication is not working between the two units they should be synchronized again. To do so, press and hold (for approx. 10 seconds) the “**ON/OFF**” button of the receiver unit until the green LED start to flash. Now the receiver unit is in synchronization mode. Then in the setting menu at function **SYNC** choose option “**SYN**” and move on with the  button. Now the thermostat and the receiver unit are synchronized and the green LED on the receiver unit stops flashing. The two units remain synchronized even after a possible power failure or battery replacement.

Attention! If you wish to synchronize several wireless **COMPUTHERM Q series** products with one thermostat at the same time or to synchronize a single wireless **COMPUTHERM Q series** product with several thermostats simultaneously, for detailed information please read Chapter **12.2**.


7.9. Testing wireless communications (TEST)


With the “**TEST**” function you can check whether the wireless (radio frequency) connection between the thermostat and its receiver unit functions properly. To this end choose the “**ON**” option at the “**TEST**” function in the setting menu and move on with the  button. Following this, the thermostat sends power on and off control signals alternating every 5 seconds for 2 minutes.

In the meantime  /  /  /  icons appear then go out on the display, and the “TEST” notice is continuously visible in the place of the exact time.

Detection of the control signal is indicated by the illumination and extinguishing of the red LED on the receiver unit. If the receiver fails to detect the signals sent by the thermostat then the receiver unit is out of the range of the wireless (radio frequency) transmitter and the two units should be placed closer to each other. If it is not feasible due to local circumstances, use a **COMPUTHERM Q2RF** radio-frequency signal repeater to extend the transmission distance. To exit “TEST” function touch the  button and the thermostat will return to the mode where it was before this function has been switched on.

7.10. Restoring factory default setting (RESET)

This function resets all settings of the thermostat to factory default. To restore factory default setting choose option “RES” at “RESET” function in the setting menu and move on with the  button.

Leaving the “RESET” function in default state (--) after touching the  button the thermostat saves the settings, exits this menu, and after returning to the home screen continues its operation according to the operating mode set beforehand.

8. OPERATING MODES OF THE DEVICE

The thermostat has the following four operating modes:

- When the programmed mode is off
 - Economy mode (🌙; Chapter 8.1.)
 - Comfort mode (☀️; Chapter 8.2.)
- When the programmed mode is on
 - Manual mode (👉; Chapter 8.3.)
 - Automatic (programmed) mode(📅; Chapter 8.4.)



Touching the ↻ button you can switch between the modes.

When you intend to operate your device temporarily in a way other than the set default mode (e.g. on the occasion of a family gathering, a holiday or a winter vacation) then you can choose from the following 3 supplementary operating modes:



- Temporary manual mode until the next program switching (👉 TEMP; Chapter 8.5.) (only in case of programmed mode)
- Temporary manual mode for 1 to 99 hours (party program) (👛; Chapter 8.6.)
- Temporary manual mode for 1 to 99 days (holiday program) (👜; Chapter 8.7.)

The thermostat can be used for control on the basis of temperature and humidity alike. In every mode the temperature/humidity to be maintained by the thermostat can be defined in 0.5 °C / 0.5 °F / 1% increments within the intervals specified in the settings.



8.1. Economy mode (☾)

In economy mode the thermostat provides the economical (e.g. night time) temperature/humidity corresponding to the set temperature/humidity in the vicinity of the place of installation. Using the  and  buttons these values can be modified at any time while this operating mode is used.

8.2. Comfort mode (☀)

In comfort mode the thermostat provides the comfort (e.g. daytime) temperature/humidity corresponding to the set temperature/humidity in the vicinity of the place of installation. Using the  and  buttons these values can be modified at any time while this operating mode is used.

8.3. Manual mode (👉)




In manual mode the thermostat provides the temperature/humidity corresponding to the set temperature/humidity in the vicinity of the place of installation until the next intervention. Using  and  buttons these values can be modified at any time while this operating mode is used.

8.4. Programmed mode (📅)

8.4.1. A description of programming






- Programming includes setting the switching times and selecting associated temperature/humidity levels. The devices can be programmed for a one week period. Its operation is automatic, repeating the set switchings cyclically every 7 days. For each day, 1 fixed switching time (**PROG 0**) and 10 optional switching times (**PROG 1 – PROG 10**) can be set. A different temperature/humidity value can be assigned to every switching time. Every temperature/humidity level set to a switching will remain valid until the time of next switching. For example, temperature/humidity values set to **PROG 0** switching time will be kept until the time of **PROG 1** switching. The temperature/humidity level selected to **PROG 1** switching will remain valid from the time of **PROG 1** switching to the time of next switching (**PROG 2**).
- The time of **PROG 0** switching is 00:00 that cannot be modified, only the temperature assigned thereto can be changed to meet individual requirements. In default setting the thermostat carries on only 1 switching (**PROG 0**) every day, which is valid from 00:00 to 00:00 on the following day.

- **Remark:** 1 switching a day (factory default setting) only makes sense if you need uniform temperature all day. (For example, if you want to maintain a continuous economical temperature, e.g. 16 °C, on weekdays, while you wish to maintain a comfort temperature, e.g. 22 °C, on weekend days). In other cases, it is advisable to activate several switchings a day for comfort and energy-saving reasons. Considering energy savings, it is recommended that the comfort temperature is activated only during the periods when the room is being used, because lowering the room temperature by 1 °C will result in approx. 6 percent energy savings on average during a heating season.
- In default position **PROG 1 – PROG 1** switchings are inactive (their time is --:--), but can be activated according to needs. The times of **PROG 1 – PROG 1** switchings are freely adjustable in 10 minutes increments between **00:10** és **23:50** with the proviso that the device enables settings of times only in ascending chronological order so that there should be at least 10 minutes difference between switching times. The min. 10 minutes difference between switching times remains even when you modify the times of a previously set program in order to avoid coincidence or overlap of switching times. In this case the device pushes forward the respective times so that the min. 10 minutes difference always remains. If due to time modifications the time of one or more switchings is moved after the last adjustable daily switching time (**23:50**) it or they will become inactive automatically.


- To enter programming mode touch the  button for 2 seconds. **During programming the values being set (date, time, temperature/humidity) flash on the display of the device. The values are always modified by using buttons ^ and v on the front panel of the device. Use the  button to record the set value and to move on.** The set program can be saved by touching the  button. A more detailed description of programming can be found in Chapter **8.4.2**.
- If there are days of the week on which you intend to use the same program then it is sufficient to write this program only once because it can be easily adopted to an optional day with the help of the “**COPY**” function according to Chapter **8.4.3**. If you want the same program for each day or intend to write programs to be used from Monday to Friday and from Saturday to Sundays which are different but are the same on a given day, you can program the device this way as described in Chapter **8.4.2**. But keep in mind that when you programmed several days similarly this way, you can modify their program only together. Therefore, if you want a program that differs from the others even for a single day, you should program the days separately, and the repeated programs can be copied with the “**COPY**” function.




- Separate programs can be written for cooling, heating, humidifying and dehumidifying modes, and the thermostat will save them when switching between modes. Therefore you can use your thermostat in more than one mode, and you do not have to rewrite the program according to the operating mode whenever switching between modes.


8.4.2. Steps of programming the device

- a) Touch the  button to move the thermostat to home screen then touch the  button for 2 seconds. Then the device gets to programming mode and the syllable indicating the relevant day(s) flashes in the top line of the display.
- b) Using the  and  buttons select the day to be programmed (the **MON** syllable indicates Monday, the **TUE** and **WED** syllables indicate Tuesday and Wednesday, and soon). If you wish to write the same program for every day of the week it is reasonable to select all days of the week at the same time (indicated by simultaneous flashing of syllables **MON, TUE, WED, THU, FRI, SAT, and SUN**) instead of programming the days of the week separately. If you want to write programs to be used from Monday to Friday and from Saturday to Sundays which are different but are the same on a given day, it is advisable to choose the 5+2 programming mode (it is indicated by simultaneous flashing of syllables **MON, TUE, WED, THU** and **FRI**, while syllables **SAT** and **SUN** are shown continuously). After the day(s) has/have been selected, touch the  button to save the setting and move on.

- c) Then the device offers to **set the temperature/humidity of PROG 1** switching that belongs to the day(s) selected. During the setting process the currently set value (in case of heating function the default setting is 20 °C) is flashing. Using **^** and **v** button set the desired temperature / humidity then touch the **↻** button to record the setting and move on.
- d) This is followed by the next step of programming, i.e. **setting the start time of PROG 1** switching that belongs to the selected day(s), and the display of the device will flash the time value (the default setting is --:--) to be set. Using **^** and **v** buttons on the front panel of the device set the desired time of **PROG 1** setting then touch the **↻** button to record the setting and move on.
- e) Now the **programming process is continued by setting the temperature belonging to PROG 1** setting and the display flashes the value to be set (in case of heating function the default setting is 20 °C). Using **^** and **v** buttons set the desired temperature / humidity of **PROG 1** setting then touch **↻** button to record the setting and move on.
- f) Then the device offers to set the time of **PROG 2** setting, and the display of the device will flash the time value (the default setting is --:--) to be set. To set switchings **PROG 2 — PROG 1** (in the same way as **PROG 1** has been set) repeat steps “d” – “e”.

If you do not intend to activate further switching options for the day(s) selected in addition to those that have already been set then touch the  button, without resetting the start date of the next offered switching from the default --:-- position. Then programming of the respective day(s) is completed and the device immediately offers selection of a new day and programming can be continued from step “b”.




If you have set all switchings from **PROG**  to **PROG**  for the selected day(s) then, after the temperature/humidity of switching **PROG**  has been set, programming the respective day(s) is finished and the device immediately offers selection of a new day and programming can be continued from step “b”.







g) **You can save and finish programming by touching the  button.** The device will automatically acknowledge settings even if no button is touched for 1 minute. Then the display of the device returns to the home screen.




If you would like to copy the program written for the day selected in section “b” to another day/other days you can easily do it by means of the “**COPY**” function as described in Chapter **8.4.3**.



8.4.3. The use of “COPY” function (copying the program of a day to another day or other days)

Attention! The “COPY” function may only be used for programming the days of the week separately!




Touch the  button to move the display of the thermostat to the home screen then enter the programming menu by touching the  button for 2 seconds. Following this, touch the  button for 2 seconds to activate the “COPY” function. The state of being ready for copying the program is indicated by the “COPY” notice appearing in the place of hour characters and flashing of the syllable showing the day being programmed.


- Using  and  buttons select the day whose program you intend to copy to another day/other days.
- Touch the  button to copy the program of the selected day. After copying has been completed, the syllable indicating the copied day stops flashing and becomes continuously visible.
- Using  és  buttons select the day to which you wish to copy the day that has been copied previously. The syllable indicating the day being selected will be flashing during setting.
- After you have chosen the day to which you wish to copy the day that has been copied previously touch the  button to copy the program. Then



the syllable indicating the day to which you have copied the program also becomes continuously visible and its flashing stops. Using buttons  and  you can select additional days to which you can copy the program that has been copied previously with .

- You can save the copied programs by touching the  button for 2 seconds. The thermostat returns to programming mode and you can continue to program the device. The thermostat saves program modifications and returns to the home screen after touching the  button or after 15 seconds.
- You can perform further copying of programs according to your need by repeating the steps described above.











8.4.4. Modifying the programs of the device

- **Set values can be freely modified at any time by repeating the programming steps.**
- You can increase the number of switchings activated previously as you like according to Chapter **8.4.2**.
- You can cancel a switching activated beforehand so that during the modification of the time of switching with buttons  and  you reset the time set previously to factory default (--:--) or touch the  button for






2 seconds. Touch the  button to cancel respective switching. If you cancelled an intermediary number the remaining switchings will be renumbered.




- If you want to finish modification of the switchings of the selected day then repeatedly touching the  button step through the switchings of the respective day until the sign of the respective day start flashing on the screen. Now you can continue modifications by selecting the next day.
- Touching the  button you can save and finish modifications. The device will automatically acknowledge the settings even if no button is touched for 1 minute. Then the display of the device returns to the home screen.
- If you intend to write a whole new program then cancel the set programs as described above or reset the device to factory default as described in Chapter **7.10**. In this case the device should be set and programmed again as described in Chapters **7.** and **8.4.**

8.4.5. Program inspection



- Touch the  button to move the display of the thermostat to the home screen then touch the  button. Syllable(s) indicating the day(s), the symbol of the **PROG**  switching, the  time and the temperature/humidity value appear on the screen (none of the values is flashing).
- Repeatedly touching the  button you can check the values of **PROG 1**, **PROG 2** etc. switchings that belong to the respective day(s). Using  and  buttons you can switch between the days. If during the programming process you programmed every day of the week (**MON, TUE, WED, THU, FRI, SAT, and SUN**), simultaneously then you can view the programs of all days only together. If you selected the 5+2 (**MON, TUE, WED, THU, FRI, SAT and SUN**) programming mode, you can inspect either programming of the first 5 days (**MON, TUE, WED, THU, and FRI**) or of the last two days (**SAT SUN**) and you can switch between these options with  and  buttons.
- After checking the program, touching the  button you can return to the home screen (if no button has been touched for 15 seconds, the display will automatically return to the home screen).







8.5. Temporary manual mode until the next program switching




The temporary manual mode can only be used in programmed mode until the next program switching. For activation, with buttons  and , modify the temperature/humidity set according to programming. After setting, the program number disappears and  icon appears on the display, indicating that the thermostat will be operated by temporary manual control until the next program switching. Following this, the thermostat will maintain the modified temperature/humidity until the time of the next switching, and during this time the temperature and humidity can be freely modified with buttons  and .

During the temporary manual mode the segments indicating the time on the display alternately show the exact time (**TIME**), and the time remaining in manual control (**TIME LEFT**) (e.g. , that is 4 hours and 2 minutes). After this time, the  icon disappears and the device returns to the set program. If you wish to return to the set program before the switching time, touch the  button.





8.6. Temporary manual mode for 1 to 99 hours (party program)







The party program can be used in any default mode of the thermostat. For activation touch the  button for 2 seconds. Then the  icon appears on the display together with the “H” notice in place of the exact time segments to show the duration of the party program in hours (the “I” number that indicates the number of the hours

 



is flashing to show that the duration is adjustable). Using  and  buttons the intended duration can be freely set between 1 and 99 hours. The set party program starts automatically and enters into effect after approx. 10 seconds. Then using  and  buttons set the temperature to be maintained during the party program period. Until the expiry of the set period the device will maintain the temporary temperature/humidity that differ from the default mode and can be freely modified with buttons  and  during the party program period.

During the party program the segments indicating the hour on the display alternately show the exact time (**TIME**) and the time remaining in temporary manual control (**TIME LEFT**) (e.g. , that is 3 hours and 20 minutes). After this time, the  icon disappears and the device returns to operation according to the mode used before the party mode. Touch the  button if you wish to return to the previously used mode before the set time expires.


8.7. Temporary manual mode for 1 to 99 days (holiday program)

The holiday program can be used in any default mode of the thermostat. For activation touch the  button for 2 seconds. Then the  icon appears on the display together with the “H” notice in place of the exact time segments to show the party program. Touch the  button to switch to the holiday program. Then in place of the exact time segments the “” number that indicates the number of the days is flashing to show that the duration is adjustable).

Using  and  buttons the intended duration can be freely set between 1 and 99 days (one day means 24 hours from the moment of setting). The set holiday program starts automatically and enters into effect after approx. 10 seconds. Then using  and  buttons set the temperature to be maintained during the holiday program period. Until the expiry of the set period the device will maintain the temporary temperature/humidity that differ from the default mode and can be freely modified with buttons  and  during the holiday program period.

During the holiday program the segments indicating the hour on the display alternately show the exact time (TIME) and the number of days remaining in temporary manual control (TIME LEFT) (e.g. “”) that is 3 days). When the remaining time decreases below 24 hours then from then on the remaining time is displayed in the same as at the party program (e.g. , that is 10:18 p.m.). After this time, the  icon disappears and the device returns to operation according to the mode used before the holiday mode. Touch the  button if you wish to return to the previously used mode before the set time expires.



9. OPERATION OF BACKLIGHT

By factory default the backlight of the thermostat automatically switches on for 15 seconds after touching any button. Regardless of the automatic backlight, touching the  button you can switch on/off the backlight. If you touch any

button while the backlight is active, the backlight will go out only 10 seconds after the last button has been touched.


You can modify the automatic backlight of the thermostat, the backlight of the keys and the backlight brightness as described in Chapter 7.

10. LOCKING THE CONTROL BUTTONS

 
You can switch off the control buttons of the thermostat to prevent the settings from accidental or unauthorized modifications. Touching the  button for 2 seconds you can lock and unlock the control buttons. The  icon appearing/disappearing in the right bottom corner of the display indicates the locked/unlocked state of the control buttons.

By default setting the thermostat automatically locks the control buttons 30 seconds after the last button has been touched. This setting can be switched off as described in Chapter 7.

11. BATTERY REPLACEMENT

The average life span of the batteries is 1 year, but frequent use of backlight can shorten this period considerably. When the  icon indicating low voltage supply flashes on the display, the batteries should be replaced (see Chapter 5.1.).

The exact time should be set again after the batteries have been replaced, but the device saves the program that has been loaded as well as the settings even without batteries therefore there is no need to reprogram or reset them.

Attention! Only high-quality alkaline batteries may be used in the device. So called durable or long-life zinc-carbon batteries are unsuitable for the operation of the devices. The  low battery icon appearing on the display warns the necessity of battery replacement reliably only when high quality alkaline batteries are being used.

12. RECEIVER UNIT OF THE THERMOSTAT

12.1. Operation of the receiver unit, meaning of its LED signs

The receiver unit switches its potential-free output in accordance with the switching signals of the wireless **Q series COMPUTHERM** room thermostat(s) which is/are synchronized with the unit.

A green and a red LEDs indicates the operating condition of the receiver unit as detailed below:

- Continuous light of the green LED indicates the manual mode. If it is not lit, the receiver unit is in automatic mode (controlled by the thermostat).
- Flashing of the green LED indicates synchronized mode.
- Continuous light of the red LED indicates that the output is on.

Chapter 4. outlines optimal location of the receiver unit, its connection and commissioning are discussed in Chapters 5.2. and 5.3., testing of the wireless communication are found in Chapter 7.9., while the synchronization process and manual operating mode are described in the following sub-chapters.

12.2. Synchronizing the receiver unit(s) with one or more thermostats

The receiver unit and its thermostat were harmonized at the factory. If you find that the thermostat fails to control the receiver unit or you intend to control it with another **COMPUTHERM Q series** room thermostat (too), then they should be synchronized. Synchronize the thermostat as described in Chapter 7.8.

If you intend to synchronize several wireless **COMPUTHERM Q series** receiver units/sockets with one thermostat then first set all receiver units to synchronization mode than perform the steps of synchronization.

If you wish to synchronize more than one thermostat with the receiver unit then repeat the previous steps with the other thermostats, too. When you reach the maximum permissible number of synchronizable products (12) then, after pressing the “**ON/OFF**” button for 10 seconds, the red and green LEDs on the product flash alternately three times. In this case, pressing the “**ON/OFF**” and “**MANUAL**” buttons for 10 seconds, the receiver unit should be set to the default position for the synchronization of the new thermostat. Then both

LEDs light up for 2 seconds, indicating that the receiver unit is reset and the synchronization of the new thermostat can commence.

Attention! If you want a given thermostat not to control the receiver unit then synchronize the thermostat with another wireless **COMPUTHERM Q series** device, perform the steps of synchronization on the thermostat alone

(without receiver unit), or reset the receiver unit to factory default as described above.

12.3. Manual control of the receiver unit

Pressing the “**MANUAL**” button disconnects the thermostat(s) from the receiver unit synchronized with it/them. Then the device connected to the thermostat can only be switched on and off manually, without any temperature/humidity control. The continuous light of the green LED indicates the manual mode. Pressing the “**ON/OFF**” button switches on or off the device connected to the receiver unit. (The red LED lights when the output is on). Pressing the “**MANUAL**” button again ceases manual control and resets automatic operation (controlled by thermostat) (the green LED goes out).

FREQUENTLY ASKED QUESTIONS

When you think that your appliance is operating incorrectly or encounter any problem while the appliance is being used then we recommend that you read Frequently Asked Questions (FAQ) available on our website, where we collected the problems and questions that most frequently occur while our appliances are being used, along with the solutions thereto:

<https://www.computherm.info/en/faq>



The vast majority of the problems encountered can be solved easily by using the hints available on our website, without seeking professional help. If you have not found a solution to your problem, please pay a visit to our qualified service.

PRODUCT INFORMATION DATA SHEET:

- Trademark: **COMPUTHERM**
- Model identifier: **Q2ORF**
- Temperature control class: **I. class**
- Contribution to the efficiency of seasonal space heating: **1%**

Remark:

In addition to using modern temperature regulators, the following up-to-date regulation methods also contribute significantly to the improvement of the comfort provided by the heating network, the energy efficiency of the heating network and the coefficient of performance:

- By dividing the heating network into sections or zones (e.g. by means of **COMPUTHERM Q4Z** vazy **Q10Z** zone controller and the associated **COMPUTHERM** means of **COMPUTHERM Q4Z** zone controller and the associated **COMPUTHERM** zone valves) and with their separate regulation we can ensure that every room (zone) is heated only when it is necessary. (You can obtain information on the establishment of the heating network and apparatuses and fittings needed for division into zones in our publication titled "Energy Savings and Comfort" which is also available on our website www.computherm.info)
- Using programmable thermostats you can ensure that every room (zone) is just heated according to a timetable preset in accordance with the demands.
- Using modern modular heating devices equipped with an external temperature sensor the boiler can be operated at higher efficiency.
- Using low temperature heating networks (e.g. 60/40 °C) and condensing boilers the temperature of the flue gas leaving the boiler can be reduced, and this way fuel efficiency can be improved significantly.

13. TECHNICAL DATA

Technical data of the thermostat (transmitter):

- **Temperature measurement range:** 0 to 48 °C (in 0.1 °C increments) / 32 to 100 °F (in 0.1 °F increments)
- **Humidity measurement range** 0 to 99% RH (in 1.0% increments)
- **Adjustable temperature range:** 5 to 45 °C (in 0.5 °C- increments) / 41 to 97 °F (in 0.5 °F increments)
- **Adjustable humidity range:** 0 to 99% RH (in 1.0% increments)
- **Temperature measurement accuracy:** ± 0.5 °C / ± 0.9 °F
- **Humidity measurement accuracy:** $\pm 3\%$ RH
- **Temperature calibration range:** ± 3 °C (in 0.1 °C increments) / ± 6 °F (in 0.1 °F increments)
- **Humidity calibration range:** $\pm 10\%$ RH (in 1% increments)
- **Optional switching sensitivity:** ± 0.1 °C - ± 1.0 °C / ± 0.2 °F - ± 2.0 °F / $\pm 1\%$ - $\pm 5\%$ RH
- **Battery voltage:** 2 x 1.5 V **alkaline** batteries (LR6 type; AA size)
- **Battery lifetime:** approx. 1 year
- **Storage temperature:** -10 °C to +50 °C
- **Operating temperature:** 0 °C to +48 °C
- **Operating humidity:** 5% to 90% (without condensation)

- **Protection against environmental impacts:** IP30
- **Operating frequency:** 868,35 MHz
- **Transmission distance:** approx. 50 m in open terrain
- **Dimensions:** 125 x 82 x 24.5 mm (W x H x D)
(without holder)
- **Weight:** 134 g
- **Temperature and humidity sensor type:** GXCAS GXHT30 digital sensor

Technical data of the receiver unit:

- **Power supply voltage:** 230 V AC, 50 Hz
- **Switchable voltage:** max. 30 V DC / 250 V AC
- **Switchable current:** 6 A (2 A inductive load)
- **Storage temperature:** 10 °C to +50 °C
- **Operating humidity:** 5 % to 90 % (without condensation)
- **Protection against environmental impacts:** IP30
- **Standby mode:** max. 0.5 W
- **Dimensions:** 90 x 90 x 30 mm (W x H x D)
- **Weight:** 126 g

Total weight of the device: approx. 351 g (thermostat + receiver + holder)

The **COMPUTHERM Q2ORF** type thermostat complies
with the requirements of directives
RED 2014/53/EU and RoHS 2011/65/EU.



Manufacturer: QUANTRAX Ltd.

Fülemüle u. 34., Szeged, H-6726, Hungary

Phone: +36 62 424 133 • Fax: +36 62 424 672

E-mail: iroda@quantrax.hu

Web: www.quantrax.hu • www.computherm.info

Origin: designed in the EU, manufactured in China

Copyright © 2022 Quantrax Ltd. All rights reserved.