

COMPUTHERM Q72

programmable, digital room thermostat



Operating instruction

TABLE OF CONTENTS

1. General description of the thermostat	5
2. Important warnings and safety recommendations	7
3. Information appearing on the display of the thermostat	8
4. Location of the thermostat	9
5. Putting the thermostat into operation, basic settings	9
5.1. Connection of the thermostat	9
5.2. Commissioning the thermostat	11
6. Operation of the thermostat that has been put into operation	13
7. Settings	13
7.1. Selecting the operating mode (FUNC)	16
7.2. Switching on and off of the programmed mode (PROG)	16
7.3. Selecting switching sensitivity (HYSTER)	17
7.4. Calibration of the temperature sensor (CALIB)	18
7.5. Switching on and off of the pump protecting function (PUMP)	18
7.6. Restoring factory default setting (RESET)	19
8. Operating modes of the device	19
8.1. Economy mode (☾)	20
8.2. Comfort mode (☀)	21

8.3. Manual mode (👉)	21
8.4. Programmed mode (📅)	21
8.4.1. A description of programming	21
8.4.2. Steps of programming the device	25
8.4.3. The use of "COPY" function (copying the program of a day to another day or days)	28
8.4.4. Modifying the programs of the device	30
8.4.5. Program inspection	31
8.5. Temporary manual mode until the next program switching	32
8.6. Temporary manual mode for 1 - 99 hours (party program)	33
8.7. Temporary manual mode for 1 - 99 days (holiday program)	34
9. Operation of backlight	35
10. Locking the control buttons	35
11. Battery replacement	36
12. Frequently asked questions	38
13. Product information data sheet	40
14. Technical data	41

1. GENERAL DESCRIPTION OF THE THERMOSTAT

The **COMPUTHERM Q72** type switch mode room thermostat is suitable for regulating a large majority of boilers and air conditioners available in Hungary. It can be easily connected to any gas boiler with two-wire thermostat connection point and to any air conditioning apparatus or electrical apparatus, regardless of whether they have a 24 V or 230 V control circuit.

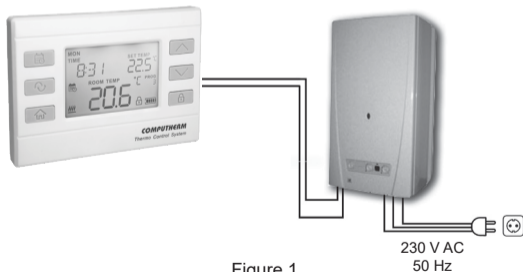


Figure 1

The device can be programmed as needed so that the heating/cooling system heats/cooling your apartment or office to the desired temperature at the times you want, and it contributes to the reduction of energy costs in addition to providing comfort. Separate independent daily programs can be created for each day of the week. For each day, beside 1 fixed switching time(**PROG** \square) 10 freely adjustable (in 10 minutes increments) (**PROG** $\{ -$ **PROG** \square) can be set, and a different temperature (in 0.5 °C increments) can be assigned to every switching times.

The simultaneous use of several **COMPUTHERM** room thermostats and one **COMPUTHERM Q4Z** or **Q10Z** zone controller provides the possibility for the thermostats to also control a pump or a zone valve in addition to starting the heater or cooler. This way it is easy to divide a heating / cooling system into zones, thanks to which the heating / cooling of each room can be controlled separately, thus greatly increasing comfort. Furthermore, the zoning of the heating / cooling system will greatly contribute to the reduction of energy costs, as due to this only those rooms will be heated / cooled at any time where it is required.

2. IMPORTANT WARNINGS AND SAFETY RECOMMENDATIONS

- Before starting to use the device, please study carefully the instructions for use and follow strictly the instructions therein.
- The thermostat is designed for business or household (non-industrial) use, it can be used to control any electrical device, the power of which does not exceed 1.15 kW (load capacity: max. 30 V DC / 250 V AC; 5 A [1 A inductive load]).
- This device is designed for indoor use. Do not use in wet, chemically aggressive or dusty environments.
- The manufacturer will assume no responsibility for any possible direct or indirect damages or income losses incurring during the use of the device.
- The device does not work without power, but the thermostat can remember the settings. If the batteries run down and they are replaced, then the device can continue to operate without any external intervention.
- **Before starting the actual control of the device connected to the thermostat, make sure that the device works perfectly and can be operated reliably even when controlled by the thermostat.**

3. INFORMATION APPEARING ON THE DISPLAY OF THE THERMOSTAT

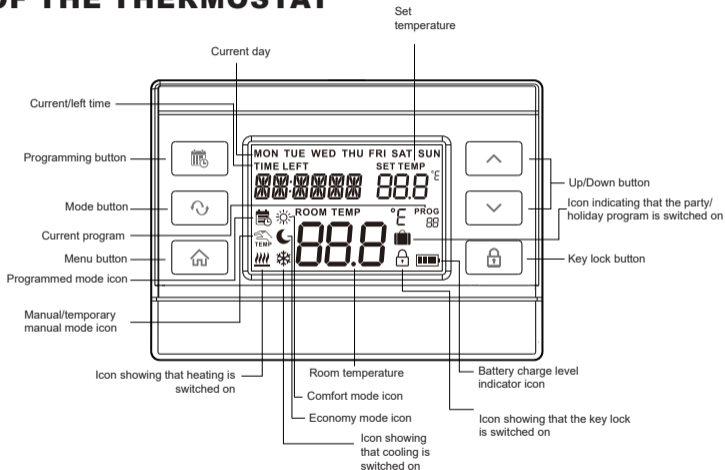


Figure 2

4. LOCATION OF THE THERMOSTAT

It is reasonable to locate it in a room used regularly or for many hours per day so that it is in the direction of natural ventilation in the room but protected from draught or extreme heat (e.g. direct sunlight, refrigerator, chimney, etc). Its optimal location is 0.75 - 1.5 m above floor level.

IMPORTANT WARNING! If the radiator valves in your flat are equipped with a thermostatic head, adjust it to maximum temperature or replace the thermostatic head of the radiator valve with a manual control knob in the room where the room thermostat is to be located, otherwise the thermostatic head may disturb the temperature control of the flat.

5. PUTTING THE THERMOSTAT INTO OPERATION, BASIC SETTINGS

5.1. Connection of the thermostat

WARNING! The device must be installed and connected by a qualified professional. Before installing, make sure that neither the thermostat or the device to be controlled is connected to the 230 V mains voltage. Modifying the thermostat can cause electric shock or product failure.

Pressing the lock on the upper side of the housing of the thermostat, remove the back cover of the thermostat as shown in the Figure 3.

Fix the back of the device to the wall using the included screws and some tools.

Remove the serial terminal cover from the inside of the back panel using a small screwdriver.

The thermostat controls the boiler or air conditioner through a potential free alternating relay whose connection points are: **1** (NO), **2** (COM) and **3** (NC). These connection points are located on the inside of the back panel, under an inner cover.

Connect the two connection points of the heating or cooling equipment to be controlled to the normally open **1** (NO) and **2** (COM) terminals of the relay. If you would like to operate an old boiler or any other device that has no connection points for thermostats, then the



Figure 3

1 (NO) and **2** (COM) connection points of the thermostat should be connected to the mains cable of the device, similarly as a switch would be connected.

To avoid electric shocks, replace the inner cover removed to connect the wires after installation.




Figure 4





ATTENTION! Always consider the loadability of the thermostat and follow the manufacturer's instructions of the heating or cooling equipment. The device must be installed and connected by a qualified professional! The voltage appearing at terminals **1** (NO) and **2** (COM) depends only on the system being controlled, therefore the dimensions of the wire are determined by the type of the device to be controlled. The length of the wire is of no significance.

5.2. Commissioning the thermostat

The battery compartment is in the inner side of the front panel of the housing. Insert 2 AA **alkaline** batteries (LR6 type) in accordance with the diagram in the battery compartment.



Attention! Only high-quality alkaline batteries may be used in the device. So called durable or long-life zinc-carbon batteries are unsuitable for the operation of the devices. The  low battery icon appearing on the display warns the necessity of battery replacement reliably only when high **quality alkaline batteries** are being used.

After the batteries have been inserted, the display flashes the day, time, program number, adjusted and measured temperatures and icons showing the operating mode and battery power level.




After inserting the batteries, snap the front panel of the device into the rear panel and press the  button. After pressing the  button, the display stops flashing, the thermostat remains at the main screen and the setting process can be started. To make sure the relay is set to its correct state, use the  and  buttons to set the set temperature once above the measured temperature and then reduce it below the measured temperature.





6. OPERATION OF THE THERMOSTAT THAT HAS BEEN PUT INTO OPERATION

The thermostat controls (manually or via programming) the devices (e.g. gas boiler, pump) connected thereto on the basis of the temperature measured by it and being set, considering the switching sensitivity of the thermostat (± 0.2 °C according to factory default) This means that when the thermostat is set to heating mode and 22 °C then at switching sensitivity of ± 0.2 °C the connection points of the output relay of the thermostat **1** (NO) and **2** (COM) close at a temperature below 21.8 °C (the heating system switches on), and open at a temperature above 22.2 °C (the heating system switches off). In cooling mode the relay switches conversely.

The closed state of the connection points **1** (NO) and **2** (COM) of the output relay is indicated by the  or  icons appearing on the display of the device, according to the selected mode.

 

7. SETTINGS

ATTENTION! According to factory default setting the key lock of the thermostat automatically switches on after 30 seconds which is indicated by the  icon that appears in the bottom right corner of the display. To unlock the keyboard, press the  button for 2 seconds  until the icon disappears from the display.



The thermostat allows a number of setting options by which the operation of the thermostat can be tailored to your liking. You can enter the setting menu of the thermostat by pressing the  button for 2 seconds. Then the continuously illuminated time and the flashing English abbreviation of the relevant day (Monday: **MON**; Tuesday: **TUE**; Wednesday: **WED** and so on) appear on the screen. In the setting menu you can modify the current setting with the  and  buttons and pressing the  button you can move to the next setting. The currently modifiable setting is flashing on the display. After the **current day** and **exact time have been set**, you can perform additional settings as follows:

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
FUNC	Operating mode	HEA: heating	HEA	Chapter 7.1.
		COO: cooling		
PROG	Switching on and off of programmed mode	OFF: Switched off. In this case the thermostat is working in a manually set Economy mode or comfort mode.	ON	Chapter 7.2.
		ON: Switched on. In this case the thermostat is working according to a pre-set program or manual mode.		
T UNIT	Temperature unit	°C	°C	--
		°F		

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
HYSTER	Switching sensitivity	$\pm 0.1 - \pm 1.0$ °C	± 0.2 °C	Chapter 7.3.
		$\pm 0.2 - \pm 2.0$ °F	± 0.4 °F	
MIN	Minimum adjustable temperature	5 – 40 °C	5 °C	--
		41 – 97 °F	41 °F	
MAX	Maximum adjustable temperature	5 – 40 °C	35 °C	--
		41 – 97 °F	95 °F	
CALIB	Calibration of the temperature sensor	-3.0 – +3.0 °C	0.0 °C	Chapter 7.4.
		-6.0 – +6.0 °F	0.0 °F	
LIGHT	Automatic backlight	OFF: switched off	ON	--
		ON: switched on (backlight switches on for 10 seconds after any button has been pressed)		
BRIGHT	Backlight brightness	0 - 10	7	--
LOCK	Automatic key lock	OFF: automatic key lock is switched off	ON	--
		ON: automatic key lock is switched on (the key lock is activated 30 seconds after pressing the last button)		
PUMP	Switching on and off of the pump protection function	OFF: switched off	OFF	Chapter 7.5.
		ON: switched on		

Displayed abbreviation	Description of the setting	Setting options	Factory default setting	Detailed description
RESET	Restoring factory default settings	--: saving the settings and exiting the settings menu after pressing the  button	--	Chapter 7.6.
		RES: restoring factory default setting after pressing  button		

To exit the setting menu and save the settings:


- press the  button, or
- wait for 30 seconds until the display of the thermostat is reset to the default screen, or
- go through the settings with the  button.


7.1. Selecting the operating mode (FUNC)

You can easily switch between heating (**HEA**; factory default setting) and cooling (**COO**) modes. The connection points of the output relay of the thermostat **1** (NO) and **2** (COM) close **at temperatures below those set in the heating mode and at temperatures above those set in the cooling mode** (taking the switching sensitivities into account).

7.2. Switching on and off of the programmed mode (PROG)

The thermostat can be used in both programmed and non-programmed

modes. When the programmed mode is on, in automatic (programmed) mode the thermostat controls the devices connected thereto according to the pre-set program, but it can be switched to manual mode by pressing the  button, and in this case it will constantly control the devices according to the temperature set manually, regardless of the pre-set program.

When you switch off the programmed mode, you can set two independent temperatures levels (comfort and economy), and you can easily switch between the two modes by pressing the  button. In this case the devices connected to the thermostat cannot be controlled according to the pre-set program.

7.3. Selecting switching sensitivity (HYSTER)

The switching sensitivity can be adjusted. By modifying this value, you can define the difference below/above the set temperature where the thermostat should switch on/off the device connected thereto. The smaller this value, the more stable is the inner temperature in the room and the comfort improves. Switching sensitivity does not affect the heat loss of the room (building) and vapour formation.

When higher comfort level is needed, it is reasonable to select the switching sensitivity so that it ensures as stable inner temperature as possible. On the

other hand, too frequent starts and stops of the controlled device should be avoided because this may reduce the efficiency and lifetime of the device.

The switching sensitivity can be set in the temperature range of ± 0.1 °C to ± 1.0 °C / ± 0.2 to ± 2.0 °F. Apart from some special cases, we propose to use ± 0.1 °C or ± 0.2 °C (factory default) when a heating/cooling system should be controlled. For more information about switching sensitivity please refer to Chapter 6.


7.4. Calibration of the temperature sensor (CALIB)


The accuracy of the thermometer of the thermostat is ± 0.5 °C. The temperature displayed by the thermostat can be modified by maximum ± 3.0 °C / ± 6.0 °F compared to the temperature measured by the temperature sensor, in increments of 0.1 °C / 0.1 °F.

7.5. Switching on and off of the pump protecting function (PUMP)

In order to prevent the pump from jamming, the activated pump protection function will start the devices connected thereto for 1 minute every day at 12:00 p.m. (noon), if switching was not done either on the respective day or on the previous day (e.g. during non-heating period). The pump protection function only works when the controlled device is in operable condition.





7.6. Restoring factory default setting (RESET)

This function resets all settings of the thermostat to factory default. To restore factory default setting choose option “rES” at “RESET” function in the setting menu and move on with the  button.

Leaving the “RESET” function in default state (--) and pressing the  button afterwards, the thermostat saves the settings, exits this menu, and after returning to the home screen continues its operation according to the operating mode set beforehand.




8. OPERATING MODES OF THE DEVICE

The thermostat has the following four operating modes:

- When the programmed mode is off
 - Economy mode ( ; Chapter 8.1.)
 - Comfort mode ( ; Chapter 8.2.)
- When the programmed mode is on
 - Manual mode ( ; Chapter 8.3.)
 - Automatic (programmed) mode ( ; Chapter 8.4.)

Pressing the  button you can switch between the modes.

When you intend to operate your device temporarily in a way other than the set default mode (e.g. on the occasion of a family gathering, a holiday or a winter vacation) then you can choose from the following 3 supplementary operating modes:

- Temporary manual mode until the next program switching ( ; Chapter **8.5.**) (only in case of programmed mode)
- Temporary manual mode for 1 to 99 hours (party program) ( ; Chapter **8.6.**)
- Temporary manual mode for 1 to 99 days (holiday program) ( ; Chapter **8.7.**)



The thermostat can be used for control on the basis of temperature alike. In every mode the temperature to be maintained by the thermostat can be defined in 0.5 °C / 0.5 °F increments within the intervals specified in the settings.

8.1. Economy mode ()



In economy mode the thermostat provides the economical (e.g. night time) temperature corresponding to the set temperature in the vicinity of the place

of installation. Using the  and  buttons these values can be modified at any time while this operating mode is used.

8.2. Comfort mode

In comfort mode the thermostat provides the comfort (e.g. daytime) temperature corresponding to the set temperature in the vicinity of the place of installation. Using the  and  buttons these values can be modified at any time while this operating mode is used.

8.3. Manual mode

In manual mode the thermostat provides the temperature corresponding to the set temperature in the vicinity of the place of installation until the next intervention. Using  and  buttons these values can be modified at any time while this operating mode is used.

8.4. Programmed mode

8.4.1. A description of programming






- Programming includes setting the switching times and selecting associated temperature levels. The devices can be programmed for a one week period. Its operation is automatic, repeating the set



switchings cyclically every 7 days. For each day, 1 fixed switching time (**PROG 1**) and 10 optional switching times (**PROG 2 – PROG 11**) can be set. A different temperature value can be assigned to every switching time. Every temperature level set to a switching will remain valid until the time of next switching. For example, temperature values set to **PROG 1** switching time will be kept until the time of **PROG 2** switching. The temperature level selected to **PROG 2** switching will remain valid from the time of **PROG 2** switching to the time of next switching (**PROG 3**).

- The time of **PROG 1** switching is 00:00 that cannot be modified, only the temperature assigned thereto can be changed to meet individual requirements. In default setting the thermostat carries on only 1 switching (**PROG 1**) every day, which is valid from 00:00 to 00:00 on the following day.

Remark: 1 switching a day (factory default setting) only makes sense if you need uniform temperature all day. (For example, if you want to maintain a continuous economical temperature, e.g. 16 °C, on weekdays, while you wish to maintain a comfort temperature, e.g. 22 °C, on weekend days). In other cases, it is advisable to activate several switchings a day for comfort and energy-saving reasons. Considering

energy savings, it is recommended that the comfort temperature is activated only during the periods when the room is being used, because lowering the room temperature by 1 °C will result in approx. 6 percent energy savings on average during a heating season.





- In default position **PROG**  – **PROG**  switchings are inactive (their time is --:--), but can be activated according to needs. The times of **PROG**  – **PROG**  switchings are freely adjustable in 10 minutes increments between **00:10** and **23:50** with the proviso that the device enables settings of times only in ascending chronological order so that there should be at least 10 minutes difference between switching times. The min. 10 minutes difference between switching times remains even when you modify the times of a previously set program in order to avoid coincidence or overlap of switching times. In this case the device pushes forward the respective times so that the min. 10 minutes difference always remains. If due to time modifications the time of one or more switchings is moved after the last adjustable daily switching time (**23:50**) it or they will become inactive automatically.
- To enter programming mode press the  button for 2 seconds. **During**

programming the values being set (date, time, temperature) flash on the display of the device. The values are always modified by using buttons \wedge and \vee on the front panel of the device. Use the  button to record the set value and to move on. The set program can be saved by pressing the  button. A more detailed description of programming can be found in Chapter 8.4.2.















- If there are days of the week on which you intend to use the same program then it is sufficient to write this program only once because it can be easily adopted to an optional day with the help of the “**COPY**” function according to Chapter 8.4.3. If you want the same program for each day or intend to write programs to be used from Monday to Friday and from Saturday to Sundays which are different but are the same on a given day, you can program the device this way as described in Chapter 8.4.2. But keep in mind that when you programmed several days similarly this way, you can modify their program only together. Therefore, if you want a program that differs from the others even for a single day, you should program the days separately, and the repeated programs can be copied with the “**COPY**” function.
- Separate programs can be written for cooling, heating modes, and the

thermostat will save them when switching between modes. Therefore you can use your thermostat in more than one mode, and you do not have to rewrite the program according to the operating mode whenever switching between modes.


8.4.2. Steps of programming the device

- a) Press the  button to move the thermostat to home screen then press the  button for 2 seconds. Then the device gets to programming mode and the syllable indicating the relevant day(s) flashes in the top line of the display.
- b) Using the  and  buttons select the day to be programmed (the **MON** syllable indicates Monday, the **TUE** and **WED** syllables indicate Tuesday and Wednesday, and soon). If you wish to write the same program for every day of the week it is reasonable to select all days of the week at the same time (indicated by simultaneous flashing of syllables **MON, TUE, WED, THU, FRI, SAT, and SUN**) instead of programming the days of the week separately. If you want to write programs to be used from Monday to Friday and from Saturday to Sundays which are different but are the same on a given day, it is advisable to choose the 5+2 programming mode (it is indicated by simultaneous flashing of syllables **MON, TUE, WED, THU**

and **FRI**, while syllables **SAT** and **SUN** are shown continuously). After the day(s) has/have been selected, press the  button to save the setting and move on.

- c) Then the device offers to **set the temperature of PROG**  switching that belongs to the day(s) selected. During the setting process the currently set value (in case of heating function the default setting is 20 °C) is flashing. Using  and  button set the desired temperature then press the  button to record the setting and move on.
- d) This is followed by the next step of programming, i.e. **setting the start time of PROG**  switching that belongs to the selected day(s), and the display of the device will flash the time value (the default setting is --:--) to be set. Using  and  buttons on the front panel of the device set the desired time of **PROG**  setting then press the  button to record the setting and move on.
- e) Now the **programming process is continued by setting the temperature belonging to PROG**  setting and the display flashes the value to be set (in case of heating function the default setting is 20 °C). Using  and  buttons set the desired temperature of **PROG**  setting then press  button to record the setting and move on.

- f) Then the device offers to set the time of **PROG 2** setting, and the display of the device will flash the time value (the default setting is --:--) to be set. To set switchings **PROG 2** — **PROG 1** (in the same way as **PROG 1** has been set) repeat steps “d” – “e”.

If you do not intend to activate further switching options for the day(s) selected in addition to those that have already been set then press the  button, without resetting the start date of the next offered switching from the default --:-- position. Then programming of the respective day(s) is completed and the device immediately offers selection of a new day and programming can be continued from step “b”.




If you have set all switchings from **PROG 1** to **PROG 1** for the selected day(s) then, after the temperature of switching **PROG 1** has been set, programming the respective day(s) is finished and the device immediately offers selection of a new day and programming can be continued from step “b”.




- g) **You can save and finish programming by pressing the  button.** The device will automatically acknowledge settings even if no button is pressed for 1 minute. Then the display of the device returns to the home screen.









If you would like to copy the program written for the day selected in section “b” to another day/other days you can easily do it by means of the “COPY” function as described in Chapter 8.4.3.

8.4.3. The use of “COPY” function (copying the program of a day to another day or other days)

 





Attention! The “COPY” function may only be used for programming the days of the week separately!

Press the  button to move the display of the thermostat to the home screen then enter the programming menu by pressing the  button for 2 seconds. Following this, press the  button for 2 seconds to activate the “COPY” function. The state of being ready for copying the program is indicated by the “COPY” notice appearing in the place of hour characters and flashing of the syllable showing the day being programmed.

- Using  and  buttons select the day whose program you intend to copy to another day/other days.
- Press the  button to copy the program of the selected day. After copying has been completed, the syllable indicating the copied day stops flashing and becomes continuously visible.












- Using  and  buttons select the day to which you wish to copy the day that has been copied previously. The syllable indicating the day being selected will be flashing during setting.
- After you have chosen the day to which you wish to copy the day that has been copied previously press the  button to copy the program. Then the syllable indicating the day to which you have copied the program also becomes continuously visible and its flashing stops. Using buttons  and  you can select additional days to which you can copy the program that has been copied previously with  button.
- You can save the copied programs by pressing the  button for 2 seconds. The thermostat returns to programming mode and you can continue to program the device. The thermostat saves program modifications and returns to the home screen after pressing the  button or after 15 seconds.
- You can perform further copying of programs according to your need by repeating the steps described above.


8.4.4. Modifying the programs of the device

- **Set values can be freely modified at any time by repeating the programming steps.**
- You can increase the number of switchings activated previously as you like according to Chapter **8.4.2**.
- You can cancel a switching activated beforehand so that during the modification of the time of switching with buttons  and  you reset the time set previously to factory default (--:--) or press the  button for 2 seconds. Press the  button to cancel respective switching. If you cancelled an intermediary number the remaining switchings will be renumbered.
- If you want to finish modification of the switchings of the selected day then repeatedly pressing the  button step through the switchings of the respective day until the sign of the respective day start flashing on the screen. Now you can continue modifications by selecting the next day.
- Pressing the  button you can save and finish modifications. The device will automatically acknowledge the settings even if no button is pressed for 1 minute. Then the display of the device returns to the home screen.






- If you intend to write a whole new program then cancel the set programs as described above or reset the device to factory default as described in Chapter 7.6. In this case the device should be set and programmed again as described in Chapters 7. and 8.4.




8.4.5. Program inspection

- Press the  button to move the display of the thermostat to the home screen then press the  button. Syllable(s) indicating the day(s), the symbol of the **PROG**  switching, the : :  time and the temperature value appear on the screen (none of the values is flashing).
- Repeatedly pressing the  button you can check the values of **PROG 1**, **PROG 2** etc. switchings that belong to the respective day(s). Using  and  buttons you can switch between the days. If during the programming process you programmed every day of the week (**MON, TUE, WED, THU, FRI, SAT, and SUN**), simultaneously then you can view the programs of all days only together. If you selected the 5+2 (**MON, TUE, WED, THU, FRI, SAT and SUN**) programming mode, you can inspect either programming of the first 5 days (**MON, TUE, WED, THU, and FRI**) or of the last two days (**SAT SUN**) and you can switch between these options with  and  buttons.









- After checking the program, pressing the  button you can return to the home screen (if no button has been pressed for 15 seconds, the display will automatically return to the home screen).


8.5. Temporary manual mode until the next program switching


The temporary manual mode can only be used in programmed mode until the next program switching. For activation, with buttons  and , modify the temperature set according to programming. After setting, the program number disappears and  icon appears on the display, indicating that the thermostat will be operated by temporary manual control until the next program switching. Following this, the thermostat will maintain the modified temperature until the time of the next switching, and during this time the temperature can be freely modified with buttons  and .

During the temporary manual mode the segments indicating the time on the display alternately show the exact time (**TIME**), and the time remaining in manual control (**TIME LEFT**) (e.g. , that is 4 hours and 2 minutes). After this time, the  icon disappears and the device returns to the set program. If you wish to return to the set program before the switching time, press the  button.




8.6. Temporary manual mode for 1 to 99 hours (party program)







The party program can be used in any default mode of the thermostat. For activation press the  button for 2 seconds. Then the  icon appears on the display together with the “H” notice in place of the exact time segments to show the duration of the party program in hours (the “H” number that indicates the number of the hours is flashing to show that the duration is adjustable). Using  and  buttons the intended duration can be freely set between 1 and 99 hours. The set party program starts automatically and enters into effect after approx. 10 seconds. Then using  and  buttons set the temperature to be maintained during the party program period. Until the expiry of the set period the device will maintain the temporary temperature that differ from the default mode and can be freely modified with buttons  and  during the party program period.



During the party program the segments indicating the hour on the display alternately show the exact time (**TIME**) and the time remaining in temporary manual control (**TIME LEFT**) (e.g. **3:20**, that is 3 hours and 20 minutes). After this time, the  icon disappears and the device returns to operation

according to the mode used before the party mode. Press the  button if you wish to return to the previously used mode before the set time expires.


8.7. Temporary manual mode for 1 to 99 days (holiday program)

The holiday program can be used in any default mode of the thermostat. For activation press the  button for 2 seconds. Then the  icon appears on the display together with the “H” notice in place of the exact time segments to show the party program. Press the  button to switch to the holiday program. Then in place of the exact time segments the “D” number that indicates the number of the days is flashing to show that the duration is adjustable).

Using  and  buttons the intended duration can be freely set between 1 and 99 days (one day means 24 hours from the moment of setting). The set holiday program starts automatically and enters into effect after approx. 10 seconds. Then using  and  buttons set the temperature to be maintained during the holiday program period. Until the expiry of the set period the device will maintain the temporary temperature that differ from the default mode and can be freely modified with buttons  and  during the holiday program period. During the holiday program the segments indicating the hour on the display alternately show the exact time (**TIME**) and the number of days remaining in temporary manual control (**TIME LEFT**) (e.g. “3 D” that is 3 days). When the


remaining time decreases below 24 hours then from then on the remaining time is displayed in the same as at the party program (e.g. 22:18, that is 10:18 p.m.). After this time, the  icon disappears and the device returns to operation according to the mode used before the holiday mode. Press the  button if you wish to return to the previously used mode before the set time expires.


9. OPERATION OF BACKLIGHT

By factory default the backlight of the thermostat automatically switches on for 15 seconds after pressing any button. Regardless of the automatic backlight, pressing the  button you can switch on/off the backlight. If you press any button while the backlight is active, the backlight will go out only 10 seconds after the last button has been pressed.

You can modify the automatic backlight of the thermostat, the backlight of the keys and the backlight brightness as described in Chapter 7.


10. LOCKING THE CONTROL BUTTONS

You can switch off the control buttons of the thermostat to prevent the settings from accidental or unauthorized modifications. Pressing the  button for 2

seconds you can lock and unlock the control buttons. The  icon appearing/disappearing in the right bottom corner of the display indicates the locked/unlocked state of the control buttons.


By default setting the thermostat automatically locks the control buttons 30 seconds after the last button has been pressed. This setting can be switched off as described in Chapter 7.

11. BATTERY REPLACEMENT

The average life span of the batteries is 1 year, but frequent use of backlight can shorten this period considerably. When the  icon indicating low voltage supply flashes on the display, the batteries should be replaced (see Chapter 5.2.).

The exact time should be set again after the batteries have been replaced, but the device saves the program that has been loaded as well as the settings even without batteries therefore there is no need to reprogram or reset them.

Attention! Only high-quality alkaline batteries may be used in the device. So called durable or long-life zinc-carbon batteries are unsuitable for the

operation of the devices. The  low battery icon appearing on the display warns the necessity of battery replacement reliably only when high **quality alkaline batteries** are being used.

12. FREQUENTLY ASKED QUESTIONS

When you think that your appliance is operating incorrectly or you encounter any problem while the appliance is being used then we recommend that you read the Frequently Asked Questions (FAQ) available on our website, where we collected the problems and questions that most frequently occur while our appliances are being used, along with the solutions thereto:

<https://compuherm.info/en/faq>



The vast majority of the problems encountered can be solved easily by using the hints available on our website, without seeking professional help. If you have not found a solution to your problem, please contact our qualified support team.

13. PRODUCT INFORMATION DATA SHEET:

- Trademark: **COMPUTHERM** ; Model identifier: **Q72**
- Temperature control class: **I. class**
- Contribution to the efficiency of seasonal space heating: **1%**

Remark:

In addition to using modern temperature regulators, the following up-to-date regulation methods also contribute significantly to the improvement of the comfort provided by the heating network, the energy efficiency of the heating network and the coefficient of performance:

- By dividing the heating network into sections or zones (e.g. by means of **COMPUTHERM Q4Z** or **Q10Z** zone controller and the associated **COMPUTHERM** zone valves) and with their separate regulation we can ensure that every room (zone) is heated only when it is necessary. (You can obtain information on the establishment of the heating network and apparatuses and fittings needed for division into zones in our publication titled "**Energy Savings and Comfort**" which is also available on our website www.computherm.info)
- Using programmable thermostats you can ensure that every room (zone) is just heated according to a timetable preset in accordance with the demands.
- Using modern modular heating devices equipped with an external temperature sensor the boiler can be operated at higher efficiency.
- Using low temperature heating networks (e.g. 60/40 °C) and condensing boilers the temperature of the flue gas leaving the boiler can be reduced, and this way fuel efficiency can be improved significantly.

14. TECHNICAL DATA

- **Temperature measurement range:** 0 to 45 °C (in 0.1 °C increments) / 32 – 100 °F (in 0.1 °F increments)
- **Adjustable temperature range:** 5 to 40 °C (in 0.5 °C increments) / 41 – 97 °F (in 0.5 °F increments)
- **Temperature measurement accuracy:** ±0.5 °C / ±0.9 °F
- **Temperature calibration range:** ±3 °C (in 0.1 °C increments) / ±6 °F (in 0.1 °F increments)
- **Optional switching sensitivity:** ±0.1 °C - ±1.0 °C / ±0.2 °F - ±2.0 °F

- **Switchable voltage:** max. 30 V DC / 250 V AC
- **Switchable current:** 5 A (1 A inductive load)
- **Battery voltage:** 2 x 1.5 V **alkaline** batteries (LR6 type; AA size)
- **Battery lifetime:** approx. 1 year
- **Storage temperature:** -10 °C to +50 °C
- **Operating temperature:** 0 °C to +45 °C

- **Operating humidity:** 5% to 90% RH (without condensation)
- **Protection against environmental impacts:** IP30
- **Dimensions:** 112 x 80 x 23 mm (W x H x D)
- **Weight:** 111 g
- **Temperature sensor type:** NTC 4200 K 10 k Ω \pm 1% at 25 °C

The **COMPUTHERM Q72** type thermostat complies with the requirements of directives EMC 2014/30/EU, LVD 2014/35/EU, and RoHS 2011/65/E.



Manufacturer: **QUANTRAX Ltd.**

Fülemüle u. 34., Szeged, H-6726, Hungary

Phone: +36 62 424 133 • Fax: +36 62 424 672

E-mail: iroda@quantrax.hu

Web: www.quantrax.hu • www.computherm.info

Origin: designed in the EU, manufactured in China

Copyright © 2024 Quantrax Ltd. All rights reserved.